




CRAFTSMAN

PERMACAST® COLUMN

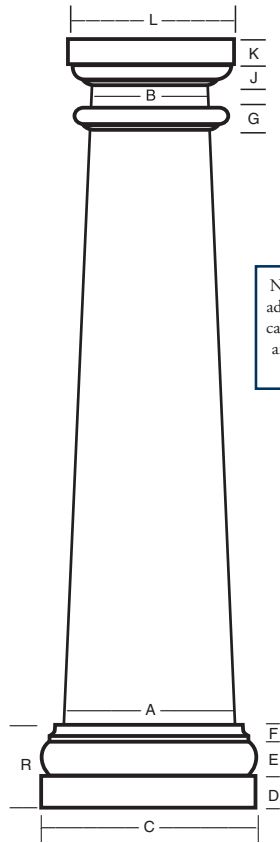

Neck mold is adjustable and can be applied anywhere on column

CRAFTSMAN INSIDE DIMENSION

Inside dimension may vary up to 1/8".
Splitting a column will decrease inside dimension 1/8".

Col Size	Top	Bottom	
10" x 5.5"	4.5"	9"	
12" x 10"	9"	11"	
16" x 9"	8"	15"	

CRAFTSMAN LOAD BEARING SPECIFICATIONS

(SPLIT COLUMNS ARE NOT LOAD BEARING)

Column Diameter	Structural Load
10" x 5.5"	10,000
12" x 10"	14,000
16" x 9"	14,000

CRAFTSMAN COLUMN DIMENSIONS (IN INCHES)

	A	B	C	D	E	F	G	J	K	L	N	O	R	Lengths
10" x 5.5"	10"	5-1/2"	13"	2-1/2"	2-3/8"	1"	1"	1-3/8"	1-3/8"	9-5/8"	N/A	N/A	5-7/8"	66"
12" x 10"	12"	10"	16 8/16"	2-1/2"	2-1/2"	1-1/16"	1"	1-3/8"	1-3/8"	12 3/4"	N/A	N/A	6 1/16"	6', 10'
16" x 9"	16"	9"	18-3/4"	2-1/2"	2-1/2"	1-1/16"	1"	1-3/8"	1-3/8"	13-1/4"	N/A	N/A	6-1/16"	58"
16" x 9"	16"	9"	19-1/16"	2-1/2"	2-1/2"	1-1/16"	1"	1-3/8"	1-3/8"	13-1/4"	N/A	N/A	6-1/16"	6', 8'

Custom sizes available, contact the HB&G architectural department.

