

Round Stock Wood Columns

STOCK COLUMN DIMENSIONS (In Inches)


COL. SIZE	A	B	C	D	E	F	G	J	K	L	O	N	R	T	LENGTH AVAIL. (ft.)
6	5 5/8"	4 3/8"	7 1/4"	1 3/8"	1 1/4"	3/16"	1 1/16"	1 1/16"	1 1/16"	7"	4 1/2"	8	3 3/16"	2"	8, 10
8	7"	6 1/4"	9 1/4"	1 1/2"	1 1/4"	1/2"	1 5/16"	1 5/16"	1 1/4"	8 7/8"	4 1/2"	8	3 1/4"	2"	8, 10, 12
10	9"	8 1/4"	11 1/4"	1 1/2"	1 1/4"	1/2"	1 5/16"	1 3/8"	1 3/8"	10 1/2"	4 1/2"	8	3 3/4"	2"	8, 10, 12, 14, 16
12	11 5/8"	9 3/8"	13 3/8"	1 3/8"	1 1/4"	1/2"	1 5/16"	1 1/4"	1 3/8"	12"	4 1/2"	8	3 3/8"	2"	8, 10, 12, 14, 16, 18
14	13 3/8"	11 1/8"	15 3/8"	3"	3 1/4"	1"	1 1/8"	2 1/8"	3"	17 1/4"	2 1/2"	3"	7 1/4"	3 1/2"	6' ↑ ↓ 30'
16	15 5/8"	13 3/8"	22"	3 3/4"	3 1/2"	1 1/8"	1 1/4"	2 1/4"	3"	19 7/8"	2 1/2"	3"	8 3/8"	3 1/2"	
18	17 5/8"	15 1/2"	24 3/4"	4 1/4"	4 3/8"	1 3/8"	1 3/4"	2 5/8"	3"	22 1/2"	2 1/2"	3"	9 3/4"	3 1/2"	
20	19 5/8"	17 1/4"	27 1/4"	4 1/4"	4 3/8"	1 3/4"	1 3/4"	2 3/4"	3 1/2"	25"	2 1/2"	3"	10 15/16"	3 1/2"	
22	21 5/8"	19 1/4"	28"	3"	4 1/2"	1 1/4"	1 3/4"	3 1/2"	2 1/4"	26"	2 1/2"	3"	8 3/4"	3 1/2"	
24	23 5/8"	21 1/4"	29 3/8"	5 1/4"	4 1/2"	1 1/4"	1 3/4"	3 1/2"	2 1/4"	28"	2 1/2"	3"	11"	3 1/2"	
26	25 5/8"	22 3/4"	32 1/2"	5 3/4"	4 1/2"	1 1/4"	1 3/4"	3 1/2"	2 1/4"	30"	2 1/2"	3"	11 1/2"	3 1/2"	
28	27 5/8"	24 1/2"	35"	6 1/4"	4 1/2"	1 1/4"	1 3/4"	3 1/2"	2 1/4"	32"	2 1/2"	3"	12"	3 1/2"	
30	29 5/8"	26 1/4"	38"	6 3/4"	4 1/2"	1 1/4"	1 3/4"	3 1/2"	2 1/4"	34"	2 1/2"	3"	12 1/2"	3 1/2"	

Columns longer than 12' will be tapered to first 12' (144"). 12' and under will have continuous taper.

ROUND WOOD INSIDE DIMENSIONS

Inside diameter may vary up to 1/4". Splitting a column will decrease inside dimension 1/8".

COLUMN SIZE	TOP I.D.	BOTTOM I.D.
6"	3 1/8"	3 1/8"
8"	4 3/8"	4 3/8"
10"	6 3/8"	6 3/8"
12"	7 1/8"	9 3/8"
14"	8 7/8"	10 7/8"
16"	10 7/8"	12 7/8"
18"	12 3/4"	14 7/8"
20"	14 1/2"	16 7/8"
22"	16 1/2"	18 7/8"
24"	18 1/2"	20 7/8"
26"	20"	22 7/8"
28"	21 3/4"	24 7/8"
30"	23 1/2"	26 7/8"

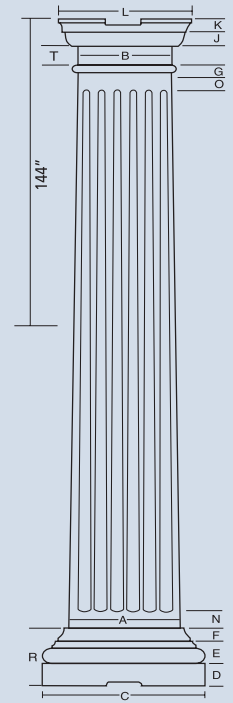


Square Stock Wood Columns

Warranty


HB&G warrants that for one year from date of shipment from its factory, its stock pine columns, when properly and adequately protected from the elements will be free of defects in material or workmanship. Columns must be properly stored in a cool, dry environment prior to installation. In the event defects are found, HB&G agrees to replace or repair the product at their option. No one is authorized to promise any other liability. Any changes, attachments, modifications or improvements to the products are specifically excluded from this warranty. In the event of a claim against this warranty, proof of purchase, with date will be required to affect such a claim. Installation cost not included. HB&G gives no other warranty expressed or implied.

SQUARE COLUMN DIMENSION CHART

Col. Dia.	A	B	C	D	E	G	H	J	K
6"	5"	6 7/8"	3"	1 1/4"	1 1/4"	1 1/4"	1 1/4"	7 1/4"	2 1/2"
8"	7 1/4"	8 7/8"	3 1/8"	1 3/8"	1 3/4"	1 1/4"	1 1/4"	9 1/8"	2 1/2"
10"	9 1/4"	10 7/8"	3 3/8"	1 3/8"	1 3/4"	1 1/4"	1 1/4"	11"	2 1/2"
12"	11 1/4"	13"	3 3/8"	1 3/8"	1 3/4"	1 1/4"	1 1/4"	13"	2 1/2"
14"	13 3/8"	18"	6 1/2"	3"	3 1/2"	1 3/4"	1 3/4"	16 1/4"	3 1/2"
16"	15 3/8"	20"	6 1/2"	3"	3 1/2"	1 3/4"	1 3/4"	18 1/4"	3 1/2"

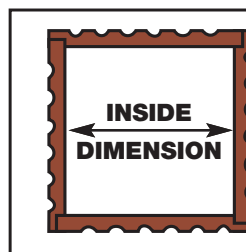

Column Size	Inside Diameter
6"	4"
8"	6"
10"	7"
12"	9"
14"	11 3/8"
16"	13 3/8"

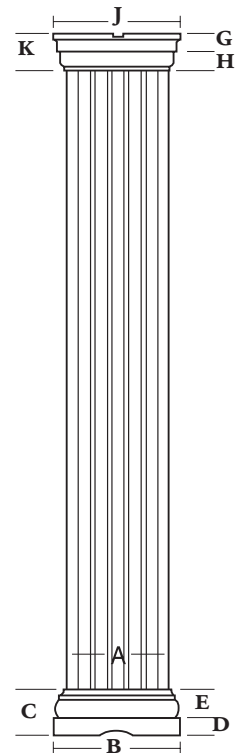

FLUTED SQUARE w/Standard Poly Cap and Base