









# PERMACast® Capitals and Bases

Choosing the right cap and base for your columns is as important as the selection of the column itself. The right cap and base can define the style of the front porch and create an atmosphere that compliments your lifestyle. The

cap and base options offered by HB&G are shown on page 11. Please see the following data that corresponds with your cap and base selection to assure that you end up with the products that work best for you.

## DIMENSIONS OF ATTIC BASE FOR ROUND AND SQUARE COLUMNS

COLUMN SIZE	ROUND ATTIC				COLUMN SIZE	SQUARE ATTIC			
	C	DD	EE	R		C	DD	EE	R
6"	8 <sup>5</sup> / <sub>16</sub> "	1 <sup>3</sup> / <sub>8</sub> "	2 <sup>3</sup> / <sub>4</sub> "	4 <sup>1</sup> / <sub>8</sub> "	6"	8 <sup>7</sup> / <sub>16</sub> "	1 <sup>3</sup> / <sub>8</sub> "	2 <sup>7</sup> / <sub>8</sub> "	4 <sup>1</sup> / <sub>4</sub> "
8"	10 <sup>1</sup> / <sub>8</sub> "	1 <sup>7</sup> / <sub>8</sub> "	3 <sup>3</sup> / <sub>4</sub> "	5 <sup>1</sup> / <sub>8</sub> "	8"	11"	1 <sup>7</sup> / <sub>8</sub> "	3 <sup>3</sup> / <sub>4</sub> "	5 <sup>1</sup> / <sub>8</sub> "
10"	13"	2 <sup>1</sup> / <sub>2</sub> "	3 <sup>7</sup> / <sub>8</sub> "	6 <sup>1</sup> / <sub>2</sub> "	10"	13 <sup>3</sup> / <sub>8</sub> "	2 <sup>3</sup> / <sub>8</sub> "	4"	6 <sup>3</sup> / <sub>8</sub> "
12"	16 <sup>1</sup> / <sub>8</sub> "	3"	4 <sup>1</sup> / <sub>2</sub> "	7 <sup>1</sup> / <sub>2</sub> "	12"	17"	2 <sup>3</sup> / <sub>4</sub> "	4 <sup>1</sup> / <sub>2</sub> "	7 <sup>1</sup> / <sub>4</sub> "
14"	19 <sup>1</sup> / <sub>4</sub> "	3 <sup>3</sup> / <sub>8</sub> "	5 <sup>3</sup> / <sub>8</sub> "	8 <sup>3</sup> / <sub>4</sub> "	N/A	N/A	N/A	N/A	N/A
16"	21 <sup>3</sup> / <sub>4</sub> "	4"	6 <sup>1</sup> / <sub>2</sub> "	10 <sup>1</sup> / <sub>2</sub> "	16"	22 <sup>3</sup> / <sub>8</sub> "	4"	6 <sup>5</sup> / <sub>8</sub> "	10 <sup>5</sup> / <sub>8</sub> "
18"	25"	4 <sup>3</sup> / <sub>8</sub> "	7 <sup>1</sup> / <sub>4</sub> "	11 <sup>5</sup> / <sub>8</sub> "	N/A	N/A	N/A	N/A	N/A
20"	27 <sup>3</sup> / <sub>8</sub> "	5 <sup>1</sup> / <sub>8</sub> "	8 <sup>1</sup> / <sub>2</sub> "	13 <sup>5</sup> / <sub>8</sub> "	N/A	N/A	N/A	N/A	N/A
22"	30 <sup>1</sup> / <sub>4</sub> "	5 <sup>3</sup> / <sub>8</sub> "	9 <sup>1</sup> / <sub>4</sub> "	14 <sup>3</sup> / <sub>8</sub> "	N/A	N/A	N/A	N/A	N/A
24"	33 <sup>1</sup> / <sub>2</sub> "	6"	10 <sup>1</sup> / <sub>4</sub> "	16 <sup>1</sup> / <sub>4</sub> "	N/A	N/A	N/A	N/A	N/A
30"	41 <sup>1</sup> / <sub>4</sub> "	6 <sup>1</sup> / <sub>2</sub> "	11 <sup>1</sup> / <sub>4</sub> "	17 <sup>3</sup> / <sub>4</sub> "	N/A	N/A	N/A	N/A	N/A

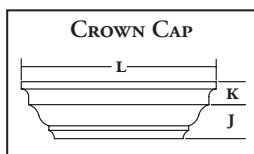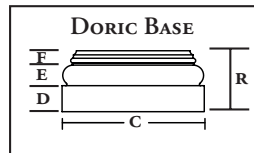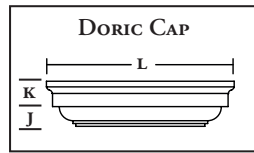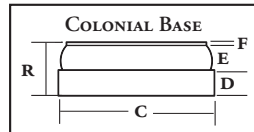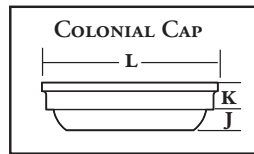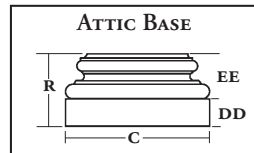

## COLONIAL CAP AND BASE DIMENSIONS

COLUMN SIZE	C	D	E	F	J	K	L	R
6"	7 <sup>1</sup> / <sub>4</sub> "	1 <sup>3</sup> / <sub>8</sub> "	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>4</sub> "	1"	1 <sup>1</sup> / <sub>4</sub> "	7"	2 <sup>7</sup> / <sub>8</sub> "
8"	9 <sup>1</sup> / <sub>8</sub> "	1 <sup>1</sup> / <sub>2</sub> "	1 <sup>5</sup> / <sub>16</sub> "	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>16</sub> "	1 <sup>3</sup> / <sub>8</sub> "	9"	3"
10"	11 <sup>3</sup> / <sub>16</sub> "	1 <sup>1</sup> / <sub>2</sub> "	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>16</sub> "	1 <sup>3</sup> / <sub>8</sub> "	10 <sup>9</sup> / <sub>16</sub> "	3"
12"	13 <sup>1</sup> / <sub>8</sub> "	1 <sup>1</sup> / <sub>2</sub> "	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>4</sub> "	1 <sup>1</sup> / <sub>16</sub> "	1 <sup>3</sup> / <sub>8</sub> "	12"	3"

## DORIC CAP AND BASE DIMENSIONS

Column Size	C	D	E	F	J	K	L	R
8"	10 <sup>3</sup> / <sub>8</sub> "	1 <sup>7</sup> / <sub>8</sub> "	1 <sup>5</sup> / <sub>8</sub> "	7 <sup>7</sup> / <sub>8</sub> "	1"	1 <sup>3</sup> / <sub>8</sub> "	10"	4 <sup>7</sup> / <sub>16</sub> "
10"	12 <sup>5</sup> / <sub>16</sub> "	2 <sup>3</sup> / <sub>8</sub> "	2 <sup>1</sup> / <sub>16</sub> "	1 <sup>1</sup> / <sub>8</sub> "	1 <sup>1</sup> / <sub>16</sub> "	1 <sup>11</sup> / <sub>16</sub> "	12 <sup>1</sup> / <sub>2</sub> "	5 <sup>9</sup> / <sub>16</sub> "
12"	15 <sup>1</sup> / <sub>2</sub> "	2 <sup>7</sup> / <sub>8</sub> "	2 <sup>1</sup> / <sub>2</sub> "	1 <sup>3</sup> / <sub>8</sub> "	1 <sup>9</sup> / <sub>16</sub> "	2"	15"	6 <sup>11</sup> / <sub>16</sub> "
14"	18 <sup>1</sup> / <sub>8</sub> "	3 <sup>15</sup> / <sub>16</sub> "	2 <sup>7</sup> / <sub>8</sub> "	1 <sup>9</sup> / <sub>16</sub> "	1 <sup>13</sup> / <sub>16</sub> "	2 <sup>3</sup> / <sub>8</sub> "	17 <sup>1</sup> / <sub>2</sub> "	7 <sup>13</sup> / <sub>16</sub> "
16"	20 <sup>7</sup> / <sub>8</sub> "	3 <sup>3</sup> / <sub>4</sub> "	3"	2 <sup>1</sup> / <sub>4</sub> "	1 <sup>9</sup> / <sub>16</sub> "	2 <sup>3</sup> / <sub>4</sub> "	20 <sup>1</sup> / <sub>2</sub> "	9"
18"	23 <sup>1</sup> / <sub>4</sub> "	4"	3 <sup>1</sup> / <sub>2</sub> "	2 <sup>1</sup> / <sub>2</sub> "	1 <sup>3</sup> / <sub>4</sub> "	3"	23 <sup>1</sup> / <sub>8</sub> "	10"

## CROWN CAP FOR SQUARE COLUMN DIMENSIONS

Column Size	K	J	L
6"	1 9/16"	2 5/16"	11 1/4"
8"	1 9/16"	2 5/16"	13 1/4"
10"	1 9/16"	2 5/16"	15 1/4"
12"	1 9/16"	2 5/16"	17 1/4"

Tuscan Cap and Base dimensions are located on page 12 for Round and page 14 for Square